

# ACCUTIRE®

# EXTEND THE LIFE OF YOUR TIRES!

## Specification

Range: 5-99 PSI / 0.4-6.9 Bar

Power: Two 3V CR2032 Lithium Batteries (replaceable)

Talking: English / Spanish

## One Car Programmable Front / Rear

## Operation Instructions

### 1. To Measure tire pressure without

#### Preset Goal

- 1.1 Press Mode, all digits light up then "0.0" appears. Default unit of measure is PSI.
- 1.2 Push nozzle of gauge on tire valve. Make sure a good seal is made between the nozzle and the valve stem so that no hissing sound of escaping air is heard.
- 1.3 Hold the gauge on valve stem until reading locks on the display. You will hear gauge talking. Gauge will voice the pressure reading.
- 1.4 Promptly remove gauge from valve stem.
- 1.5 Pressure reading stay on the display for 10 seconds. With the reading on the display, press any key to hear the reading again for the last time.
- 1.6 Gauge will reset to 0.0 after a period of 10 seconds from the moment gauge has stopped talking.
- 1.7 Gauge will automatically turn off after 10 seconds interval from gauge displays 0.0

### 2. To goal setting

- 2.1 Press Mode to power on the gage, all digits light up then "0.0" appears on the display.
- 2.2 Press and hold Mode for 3 seconds to enter setting mode. PSI or Bar appears and blinks. Press up or down to switch between PSI and Bar then press Mode to confirm.
- 2.3 Language English "EN" for Spanish "SP" appears and blinks. Press up/down key to switch between English ("EN") and Spanish ("SP") and press Mode to confirm.
- 2.4 Front or rear tire lights up and blinks. Press up/down to switch between front and rear and press Mode to confirm.
- 2.5 Press up/down to change the goal number and press Mode to confirm.
- 2.6 The second tire lights up. Press up/down to change the goal number and press Mode to confirm.
- 2.7 Unit of measure, language, and goal numbers for both tires light up in turns and stay for about 2 seconds.
- 2.8 Display goes to "0.0". Follow 3.2-3.9 to measure for front and rear tires.

Note: To exit at any stage in setting mode, press and hold Mode for 3 seconds.

### 3. Pressure Measurement with Preset Goal

- 3.1 Press Mode to power on the gage, all digits light up and then "0.0" appears on the display.
- 3.2 Press up/down to choose between front and rear tire.
- 3.3 Push nozzle of gauge on to tire valve.

- 3.4 Hold gauge on valve stem until the pressure reading is displayed and locked. You will hear gauge talking. Gauge will voice the actual pressure reading.
- 3.5 Promptly remove gauge from valve stem.
- 3.6 The actual pressure reading, goal number and the difference between actual reading and goal will appear stay on the display for 10 seconds ("+10", for example, means 10 PSI needs to reach the goal). With the reading on the display, press any key to hear the reading again for the last time.
- 3.7 Gauge will reset to 0.0 after a period of 10 seconds from the moment gauge has stopped talking.
- 3.9 Gauge will turn off after 10 seconds interval from gauge displays 0.0
- 3.10 Before gage turns off, follow instruction of 3.2-3.6 to measure pressure of the second tire.

## What to do if

1. You do not get any reading at all. See the instruction and follow carefully. Try again. If gauge still does not work, see Warranty and Service section.
2. You observe "L" on the display. The power supply has been depleted. Replace the batteries.
3. You observe an unusually high and low reading. Make sure no sound of escaping air is heard, as in Step 1 of the instructions. Also, make sure you are checking the pressure on cool tire which have not been driven on for several hours.

## Warranty and Service

Measurement Ltd., Inc. warrants this gauge against defects in material or workmanship for a period of five (5) years from the date of purchase and agrees to replace it free of charge. This warranty does not cover damage resulting from misuse or abuse of the product. Should your gauge require service, you may send it back to Measurement Ltd., Inc. for repair or replacement.

**Our authorized service center address:**  
**11751 Rock Landing Drive Suite H-7**  
**Newport News, Virginia 23606 U.S.A.**  
**Attn: Customer Service**



Measurement Ltd., Inc.  
[www.measurement-ltd.com](http://www.measurement-ltd.com)



Made in China