

ACCUTIRE®**EXTEND THE LIFE OF YOUR TIRES!****Specifications**

Range: 5 ~ 99 PSI or 0.4 ~ 6.80 Bar or
35 Kpa ~ 680Kpa

Accuracy: $\pm 1\%$ + 1 LSD

Operating Temperature: -10 ~ 50°C

(14 ~ 122°F)

Instructions

1. Remove battery tab before 1st use. Pull tab to remove, gauge is now ready for use.
2. Push nozzle of Accutire® on tire valve. Make sure a good seal is made between the nozzle and the valve stem so that no hissing sound of escaping air is heard.
3. Hold gauge on valve stem until reading locks on the display.
4. Promptly remove gauge from valve stem and read pressure.
You may continue to use the gauge even though the previous reading is still displayed by following the instructions above.

Note: The gauge automatically turns off after about 10 more seconds.

5. Check your tire gauge once a week, the battery life is about 1 year based on 5 operations per day.

Zero Set

The gauge is a precision electronic instrument and from time to time it is advisable to check the zero setting, especially at extreme hot and cold temperatures. To check the zero setting: Briefly press the gauge on to the tire valve. It is not necessary for a good seal to be made.

Only a small amount of air must enter the gauge to zero set the unit. Promptly remove gauge from valve stem when display shows "00.0". Your Accutire has now been recalibrated.

What To Do If

- You do not get any reading at all (either blank display or all zeros):
See the instructions and follow them carefully. If gauge still does not work, see Warranty & Service section.
- You observe an unusually high/low reading: Make sure no sound of escaping air is heard in step #1 of instruction. Also, make sure you are checking the pressure on cool tires which have not been driven on for several hours.

Helpful Hints

- Always be sure to follow tire manufacturer's recommended pressure ratings with are based on "cool" tire temperatures.
- The electronic module and power cell are factory sealed in the unit. There are no user serviceable parts.
- To clean the gauge, use a soft damp cloth. Do not immerse in, or spray with water or other liquid cleaner.

Warranty & Service

Measurement Ltd., Inc. warrants this product against defects in material or workmanship for a period of five (5) years from the date of purchase and agrees to replace it free of charge. This warranty does not cover damage resulting from misuse or abuse of the product. Should your product require service, you may send it back to MLI for repair or replacement.

Our authorized service center address:

Measurement Ltd., Inc.

Our authorized service center address:
11751 Rock Landing Drive Suite H-7
Newport News, Virginia 23606 U.S.A.
Attn: Customer Service

Made in China

Please take care in packing the gauge so it will not be damaged while in transit, MLI is not responsible for freight costs to our service center. You should send the package freight prepaid. We also recommend the package be insured in case of damage or theft while in transit.

US Patent No.D534092



Measurement Ltd., Inc.

www.measurement-ltd.com



0 15507 10560 8

Made in China