

12273



# Pocket Digital Tire Pressure Gauge with Keyring

- Range 5-99 PSI
- Pressure measurement displayed on LCD display
- Automatically reads pressure when placed on tire valve



#### INSTRUCTIONS:

1. Push nozzle of Tire Gauge onto tire valve. Make sure a good seal is made between the nozzle and the valve stem so that no hissing sound of escaping air is heard.
2. Hold gauge on valve stem until reading locks on the display.
3. Promptly remove gauge from valve stem and read pressure. You may continue to use the gauge even though the previous reading is still displayed by following the instructions above.



#### SPECIFICATIONS:

**RANGE:** 5-99 PSI

**ACCURACY:** +/-1% +/- 1 LSD

**POWER:** NON-REPLACEABLE  
LITHIUM COIN CELL

#### Note:

The gauge automatically turns off after about 10 seconds.

#### ZERO SET:

The gauge is a precision electronic instrument and from time to time it is advisable to check the zero setting especially at extreme hot or cold temperatures.

To check the zero setting: briefly press the gauge onto the tire valve. It is not necessary a good seal to be made.

Only a small amount of air must enter the gauge to zero set the unit. Promptly remove gauge from valve stem when display shows '00.0'. Your gauge has now been recalibrated.

#### NOTE:

Make sure when checking tire pressure that the tires are cold and have not been driven on for several hours.

PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE USE.



Customer Enquiries:  
US: 001 973 402 4240

Michelin and the Tyre Man (Bibendum) are trademarks used with permission from the Michelin Group.

Distributed under licence by:  
Measurement Ltd., Inc.  
2001 Route 46, Suite 310, Parsippany, NJ 07054

©2007 Michelin  
www.michelin.com

Made in China



12273