

ACCUTIRE®

DIGITAL TIRE GAUGE

Extend the Life of Your Tires!

SPECIFICATIONS:

Range: 5-150 PSI

Operating Temperature: 0-100 deg. F
(-18 to 33°C)

Accuracy: +/- 1% + 0.5

Power: Replaceable Lithium LR44 1.5V
Coin Cell (3)

INSTRUCTIONS:

1. Remove battery tab before 1st use. Pull tab to remove, gauge is now ready for use.
2. Push nozzle of Accutire on to tire valve. Make sure a good seal is made between the nozzle and valve stem so that no hissing sound of escaping air is heard.
3. Hold gauge on valve stem until the reading locks on the display.
4. Promptly remove gauge from valve stem and read pressure. You may continue to use the gauge even though the previous reading is still displayed by following the instructions above. Note: The gauge will shut off automatically.
5. Check your tire gauge once a week, the battery life is about 1 year based on 5 operations per day.

ZERO SET:

The gauge is a precision electronic instrument and from time to time it is advisable to check the zero setting especially at extreme hot or cold temperatures. To check the zero setting: Briefly press the gauge onto the tire valve.

It is not necessary for a good seal to be made. Only a small amount of air must enter the gauge to zero set the unit. Promptly remove gauge from valve stem when display shows "00.0". Your Accutire has now been recalibrated.

Replacing the Batteries

To replace the batteries, unscrew the battery cover and remove the old batteries. Insert new batteries (Maxell LR44 or equivalent), being careful to observe the correct polarity. Replace the battery compartment cover and screw tightly.

WHAT TO DO IF:

- 1 You do not get any reading at all (either blank display or all zeros). See the instructions and follow them carefully. If gauge still does not work, see Warranty and Service section.
- 2 You observe "L" on the display. The power supply has been depleted.
Replace the batteries.
- 3 You observe an unusually high or low reading. Make sure no sound of escaping air is heard, as in Step 1 of the instructions. Also, make sure you are checking the pressure on cool tires which have not been driven on for several hours.

HELPFUL HINTS:

- Always be sure to follow tire manufacturers recommended tire pressure ratings which are based on cool tire temperatures.
- The electronic module and power cell are factory sealed in the unit. There are no user serviceable parts.
- To clean the gauge, use a soft damp cloth. Do not immerse in, or spray with water or other liquid cleaner.

WARRANTY AND SERVICE:

Measurement Ltd., Inc. (MLI) warrants this product against defects in material or workmanship for a period of five (5) years from the date of purchase and agrees to replace it free of charge. This warranty does not cover damage resulting from misuse or abuse of the product. Opening or taking apart the product will void the warranty! Should your product require service, we suggest you first return it to the place of purchase. If the store does not replace the product, you may send it back to MLI for repair or replacement.

Our authorized service center address
11751 Rock Landing Drive Suite H-7
Newport News, Virginia 23606 U.S.A.
Attn: Customer Service

Please take care in packing the product so it will not be damaged in transit. MLI is not responsible for freight costs to our service center. You should send the package freight prepaid. We also recommend the package be insured in case of damage or theft while in transit.



Measurement Ltd., Inc.
www.measurement-ltd.com

US Patent No. D409931

Printed in China