

EXTEND THE LIFE OF YOUR TIRES!

Specifications

Range: 5-150 PSI

Accuracy: +/- 1% + 0.1 PSI

Operating Temperature: -4°F ~ 140°F (-20°C ~ 60°C)

Power: 3 x AAA Battery (replaceable)

Measuring Tire Pressure

1. Push nozzle of gauge onto tire valve.
2. Hold gauge on valve stem until the pressure reading is displayed and locked.
3. The pressure reading will show (stay) on the LCD for about 7 seconds. Then gauge will turn off.

Replacing the Battery

1. Unscrew the battery cap and remove the old battery.
2. Insert new 3 AAA batteries.
3. Replace the battery cap cover and screw it tightly.

Helpful Hints

Always be sure to follow the tire manufacturer's pressure ratings which are based on cool tire temperatures. Use a soft damp cloth to clean your tire gauge. Do not use any liquids or cleansers.

Troubleshooting:

1. The display is blank
Make sure that the pressure seal between the tire gauge and the valve stem is free from leaks.
2. The display reads "0.0" even if pressure applied in correct manner
The unit has an internal calibration error. Return to factory for service.
3. The unit displays an unusually high/low reading
Check to make sure there are no leaks in the system or during measurement. Re-zero the unit by taking a reading, and allowing the unit to automatically shut off. Then recheck the tire pressure.

Warranty and Service

Measurement Ltd., Inc warrants this gauge against defects in material of workmanship for a period of five (5) years from the date of purchase and agrees to replace it free of charge. This warranty does not cover damage resulting from misuse or abuse of the product. Should your gauge require service, you may send it back to Measurement Ltd., Inc for repair or replacement.

Our authorized service center address:
11751 Rock Landing Drive Suite H-7
Newport News, Virginia 23606 U.S.A.
Attn: Customer Service



Measurement Ltd., Inc.
www.measurement-ltd.com



Made in China